
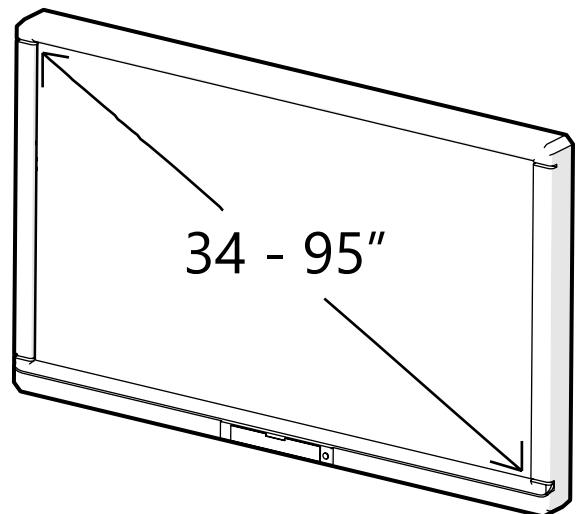
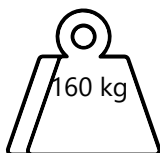
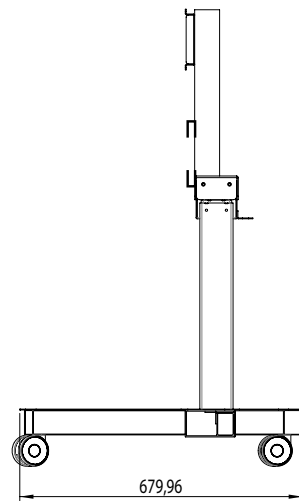
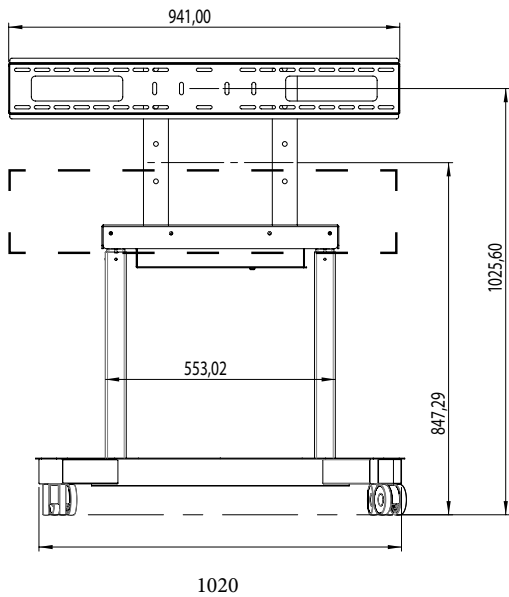
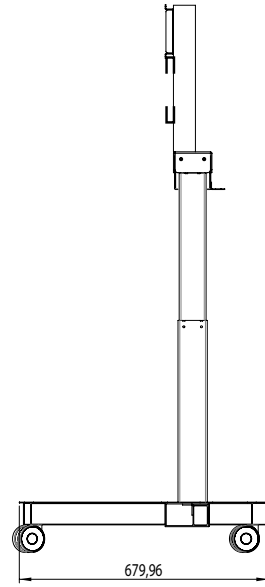


HMIFSTNDRD-F


Motorised mobile floor stand

USER MANUAL


MANUALE UTENTE | USER MANUAL
MANUAL DE USUARIO | BENUTZERHANDBUCH

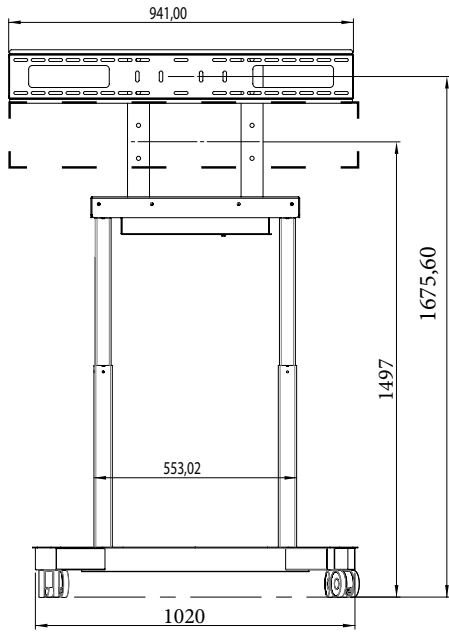



Contenido/contents/contenuto/Sisälllys/Contenu:

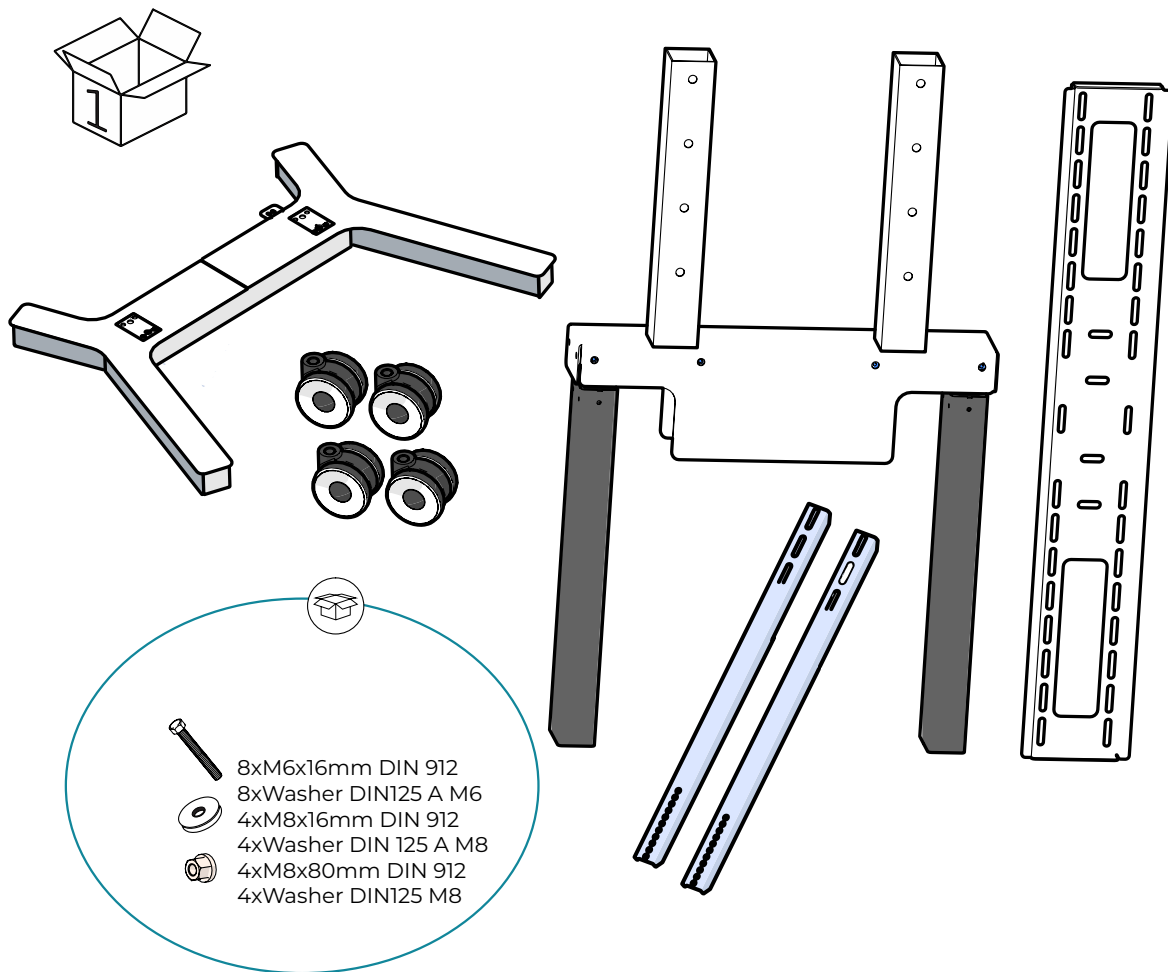

Herramientas necesarias | Tools needed | Attrezzi necessari | Tarpeelliset työkalut | Outils nécessaires:

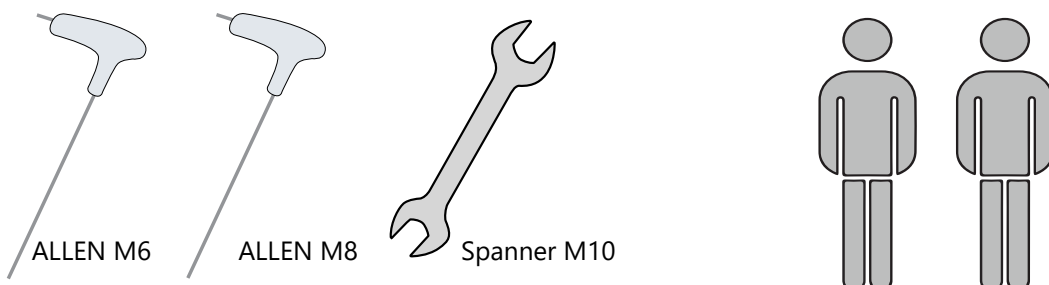

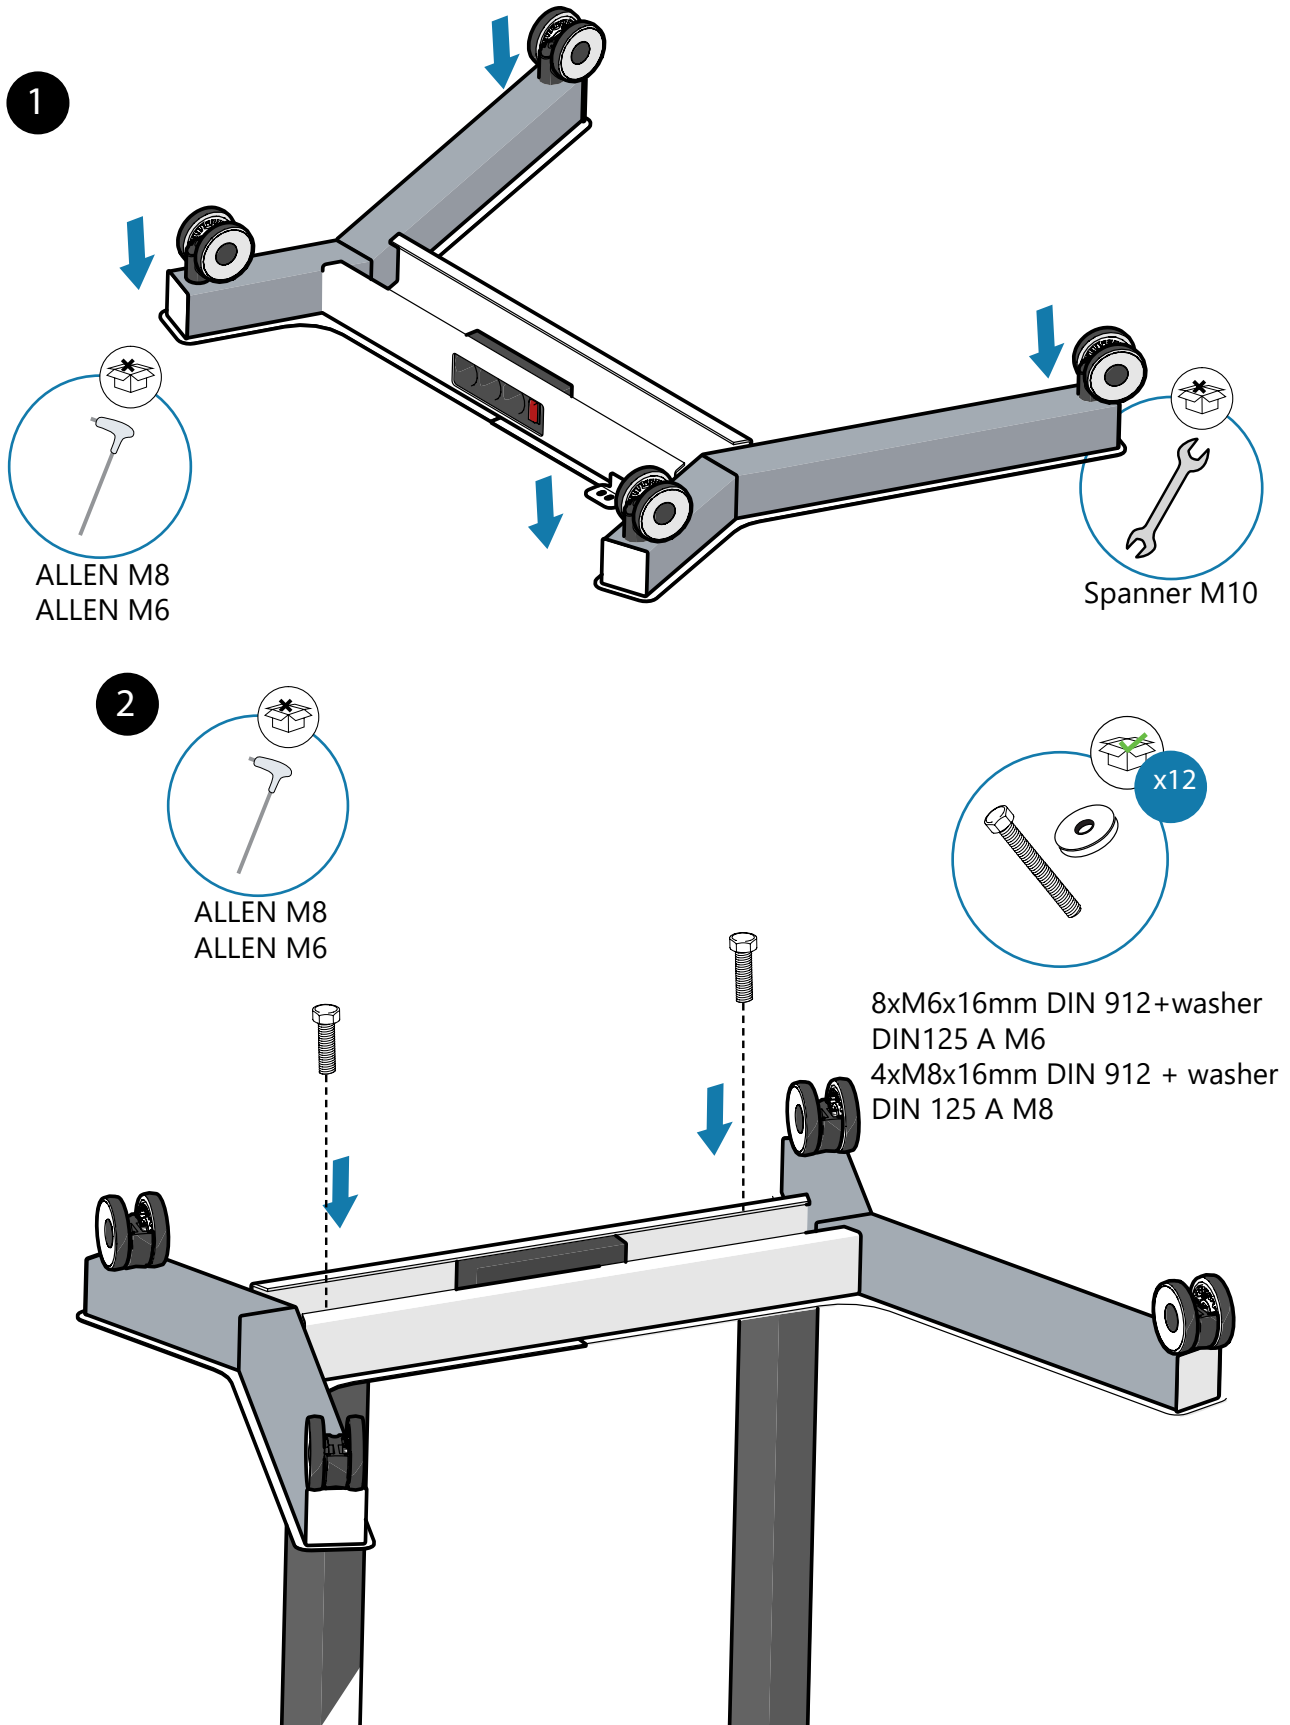

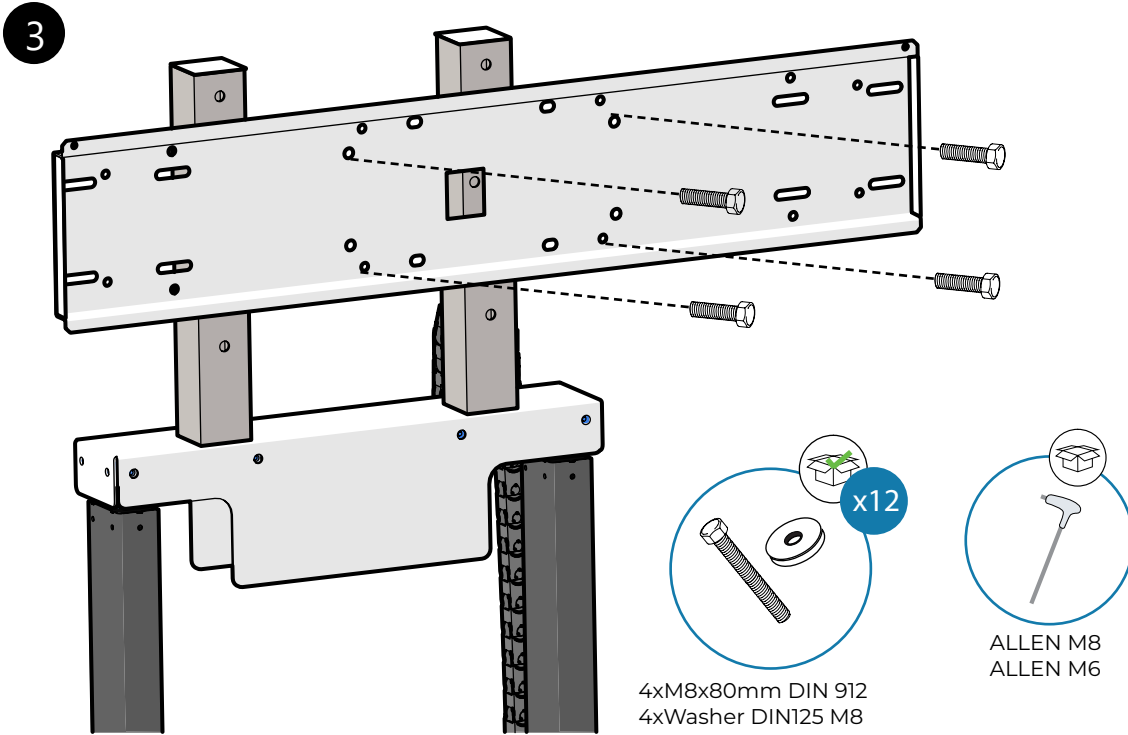


Calibración motor | Motor calibration | Calibrazione motore | Motorkalibrierung


4



Presionar 3 seg botón bajada en posición baja | Hold down button for 3 sec in low position | Premere il pulsante giù per 3 secondi ad altezza minima | Halten Sie die Taste "Unten" 3 Sekunden lang in der niedrigen Position gedrückt

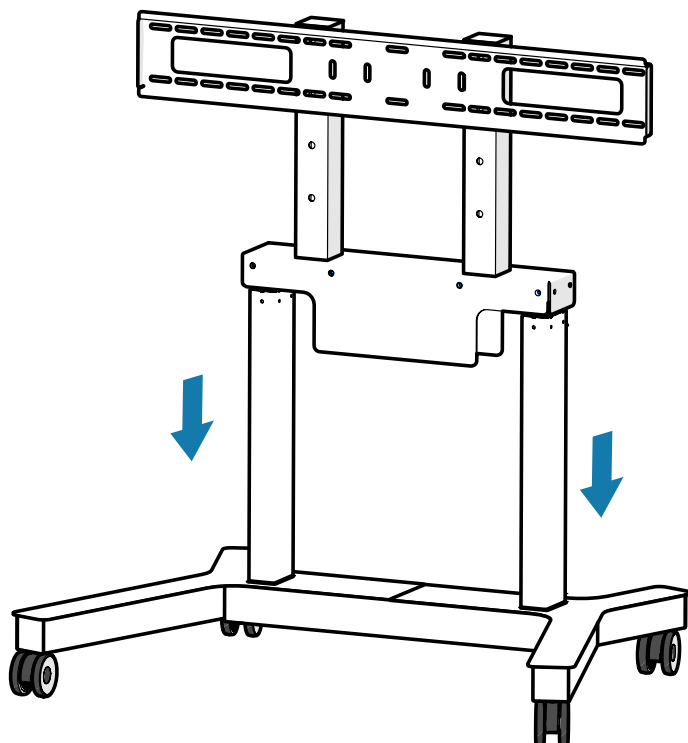


5

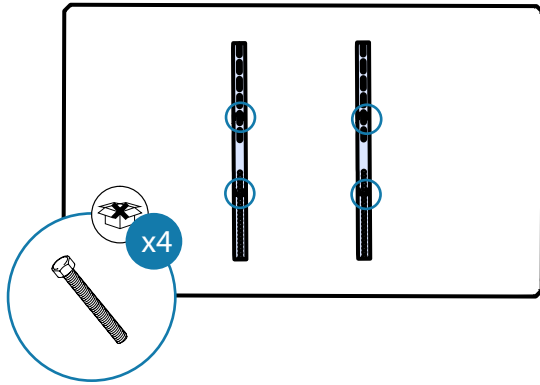


6



7

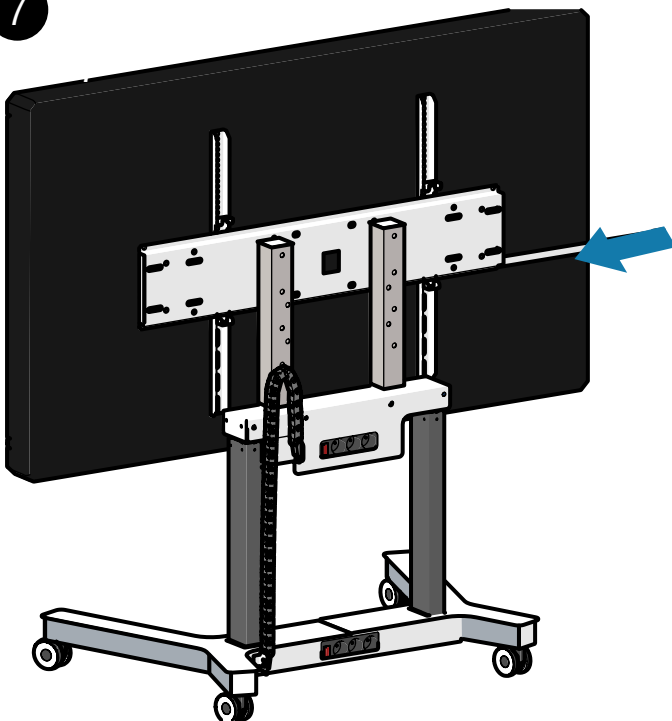


8

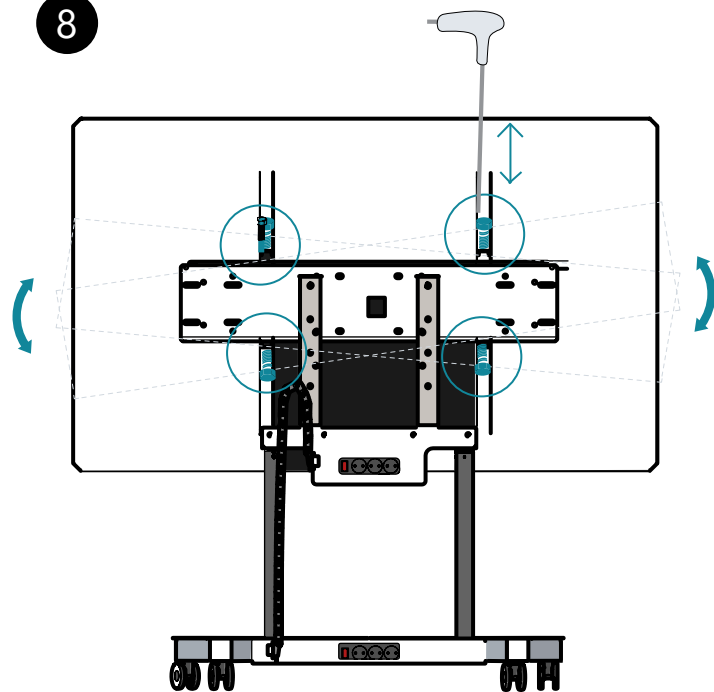


HMIBOX

Accessorio | Accessory | Accesorio | Zubehörteil

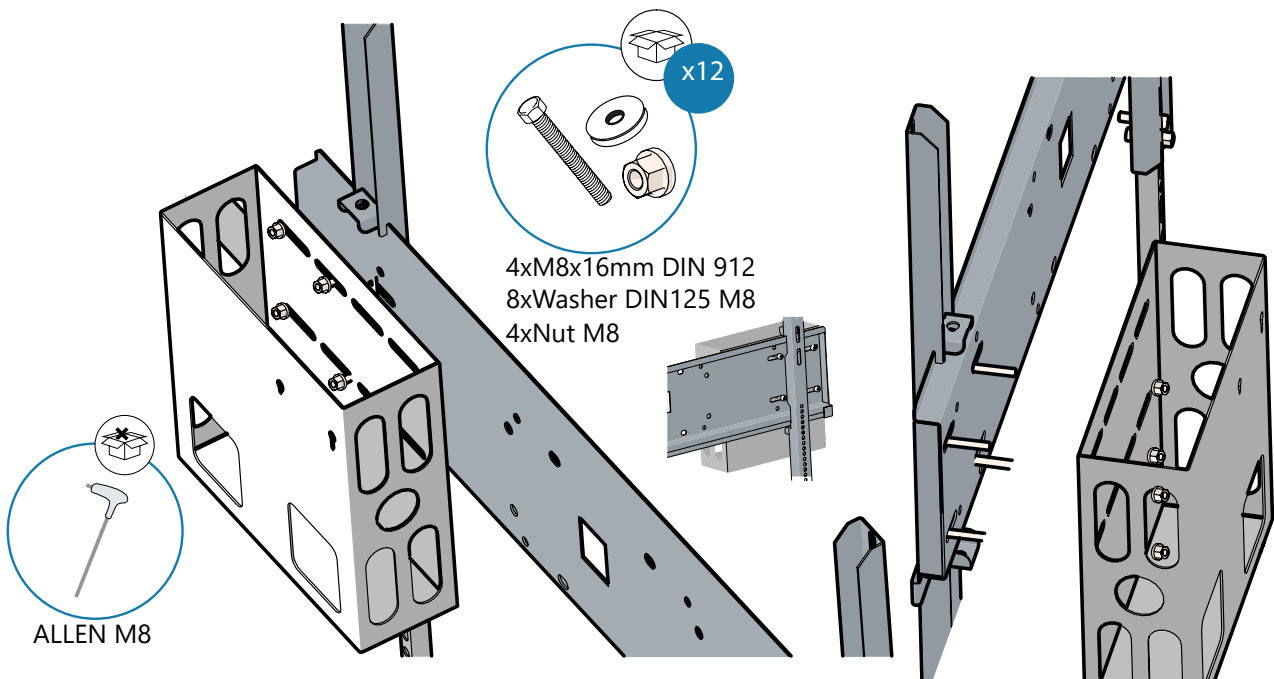

HMICHAIN

Accessorio | Accessory | Accesorio | Zubehörteil

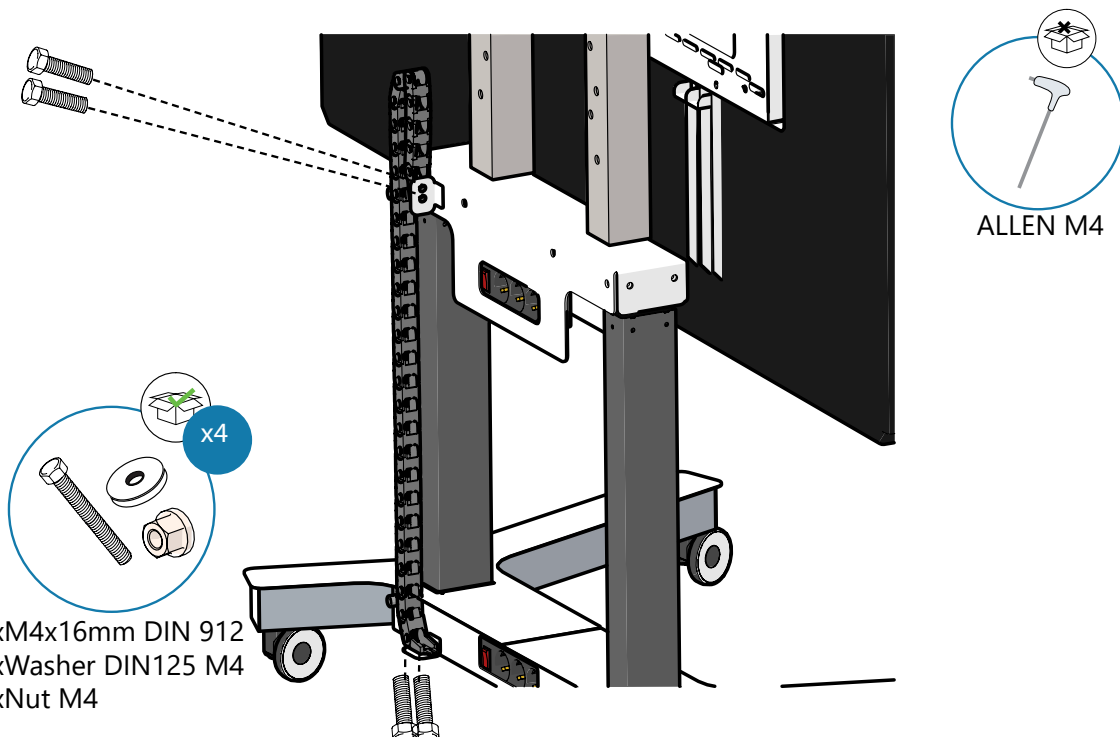

HMICOVER

Accessorio | Accessory | Accesorio | Zubehörteil


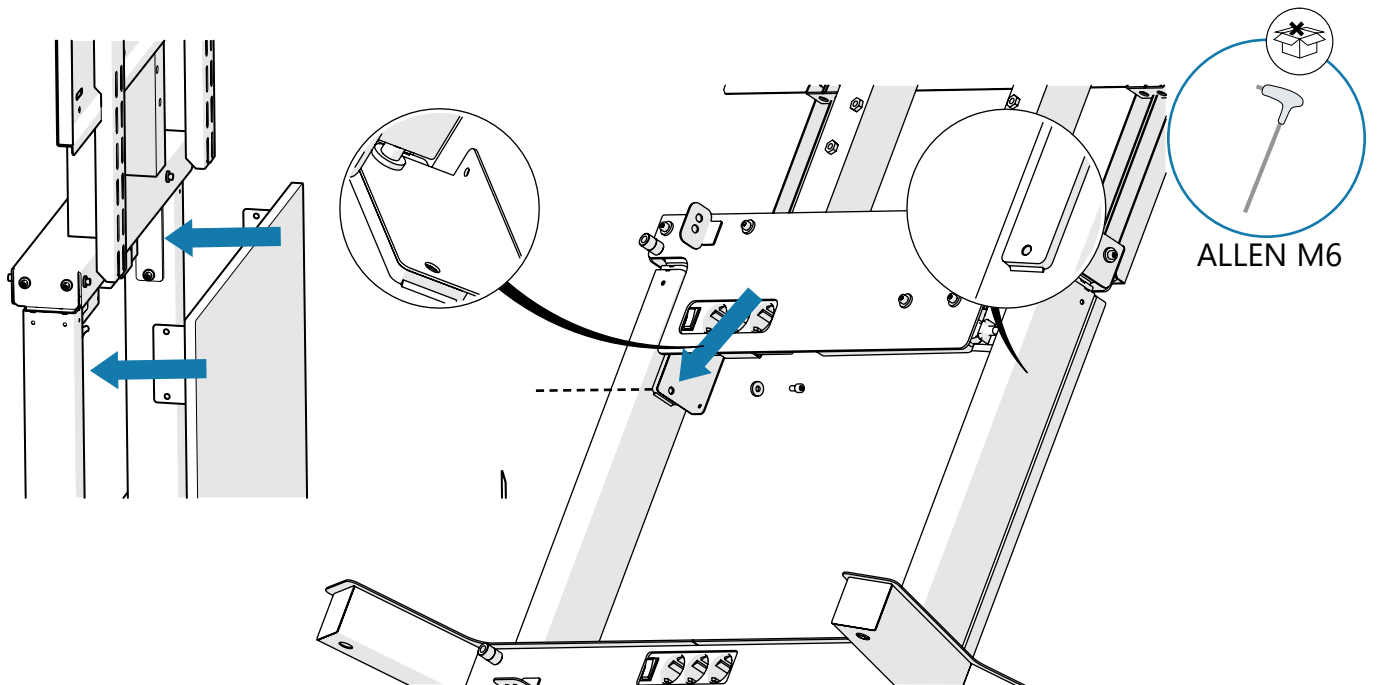


Diagrama eléctrico del motor / electrical diagram of the lifting system /
diagramma dell'impianto elettrico di sollevamento / Nostojärjestelmän
tekninen kaava / Schéma électrique du système de rehausse.



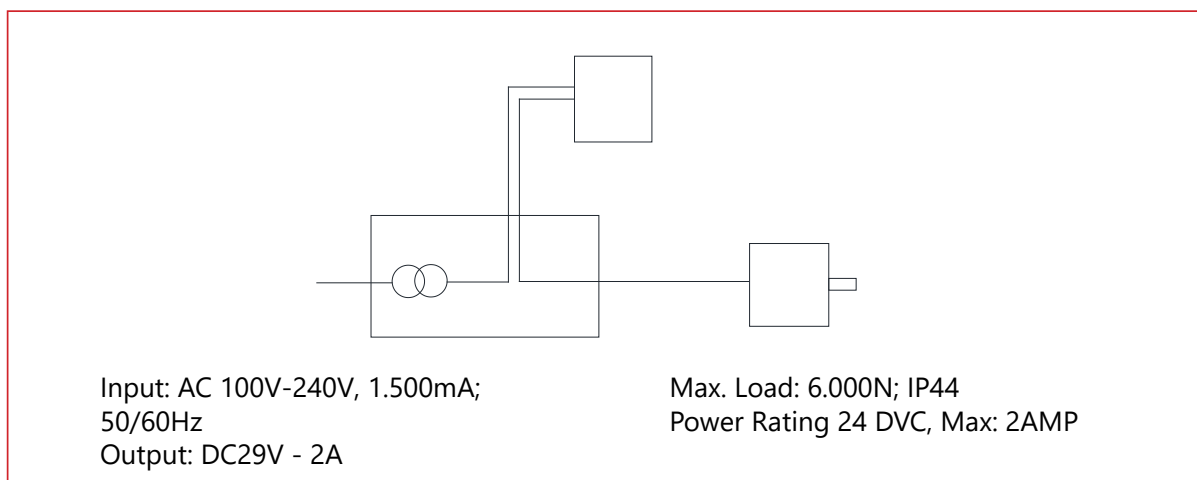

www.HELGI-europe.com

HELGI Europe

education@helgi-europe.com

business@helgi-europe.com